

| EURO | | | | | | SMS | | | | | | | | | | | | | | | |
|-----------|----------|----------|----------------|----------|--------------|------------|----------|------------|----------|----------|-----------|---------|---------------|---------|---------|---------|---------|---------|---------|--------------|--|
| Herde | | | | | Schaltkasten | Herde | | | | | | | | | | | | | | Schaltkasten | |
| ELVE 8160 | ELV 8260 | ESN 8260 | ESN 8262 230 V | ESR 5482 | ES 4462 | CLH 7482 R | CLH 7482 | CKH 7482 R | CKH 7482 | CKH 7380 | CK 7482 R | CK 7482 | CK 7482 230 V | CK 7380 | CS 7480 | CS 7380 | CS 7280 | SK 7482 | SR 7482 | | |

Induktions-Kochfelder

| | | |
|--------------|----------|-----------------|
| ETPI 8740 NE | Euro/SMS | Sensorbedienung |
| ETPI 8740 IN | | |
| ETPI 8640 NE | Euro/SMS | |
| ETPI 8640 IN | | |
| ETI 6646 IN | Euro/SMS | |
| ETPI 8930 IN | Euro/SMS | |

Sensor-Glaskeramik mit LIGHTRONIC

| | | |
|-----------|----------|-----------------|
| EDIV 6740 | Euro/SMS | Sensorbedienung |
| EDPV 6740 | Euro/SMS | |
| EDIS 6640 | Euro/SMS | |
| EDPS 6640 | Euro/SMS | |
| | | |

Sensor-Glaskeramik

| | | |
|-----------|----------|-----------------|
| ETPV 6950 | Euro/SMS | Sensorbedienung |
| EDFX 7740 | Euro/SMS | |
| EDUR 6640 | Euro/SMS | |
| | | |

LIGHTRONIC-Kochfelder

| | | | | | | | | | | | | | | | | | | | |
|---------------|------|---|---|---|---|--|---|--|--|--|--|--|--|--|--|--|--|--|--|
| EKM 4462 | Euro | X | X | X | | | X | | | | | | | | | | | | |
| EKV 4462 | Euro | X | X | X | | | X | | | | | | | | | | | | |
| EKI 4462 | Euro | X | X | X | | | X | | | | | | | | | | | | |
| EKS 4461 | Euro | X | X | X | | | X | | | | | | | | | | | | |
| EK 4460 | Euro | X | X | X | | | X | | | | | | | | | | | | |
| EK 6640 230 V | Euro | | | | X | | | | | | | | | | | | | | |

Glaskeramik-Kochfelder

| | | | | | | | | | | | | | | | | | | | |
|----------------|-----|--|--|--|---|--|---|---|---|--|---|---|---|--|---|--|--|---|---|
| EKA 6486 LI | SMS | | | | X | | X | X | X | | X | X | | | | | | X | X |
| EKA 6486 RE | | | | | | | | | | | | | | | | | | | |
| EKB 6485 | SMS | | | | X | | X | X | X | | X | X | | | | | | X | X |
| EKV 3482 | SMS | | | | X | | X | X | X | | X | X | | | | | | X | X |
| EKV 3482 230 V | SMS | | | | | | | | | | | | X | | | | | | |
| EKI 3483 | SMS | | | | X | | X | X | X | | X | X | | | | | | X | X |
| EKS 3481 | SMS | | | | X | | X | X | X | | X | X | | | | | | X | X |
| EK 3480 | SMS | | | | X | | X | X | X | | X | X | | | X | | | X | X |

Kochtische

| | | |
|----------------|----------|--------------|
| ETK 6260 230 V | Euro/SMS | Drehschalter |
| ETK 5240 | Euro/SMS | |
| ETK 5240 230 V | | |
| ETN 5240 | Euro/SMS | |
| ETN 5240 230 V | | |

Kochplattensätze

| | | | | | | | | | | | | | | | | | | | |
|---------|-----|--|--|--|---|--|---|---|---|--|---|---|---|---|---|---|---|---|---|
| PS 3280 | SMS | | | | | | | | | | | | | | | | X | | |
| PS 3380 | SMS | | | | | | | | X | | | | | X | | X | | | |
| PS 3480 | SMS | | | | X | | X | X | X | | X | X | X | | X | | | X | X |